



**Warnings and Instructions: Review carefully, proper application is required**


**⚠ Warning:** This device will not prevent or eliminate risk of injury. Do Not Overtighten. If swelling, pain, skin irritation, or an unusual reaction occurs, discontinue use immediately and consult your medical professional.  
Care: Hand wash using mild soap. Rinse thoroughly. Air dry only. Do not tumble dry.

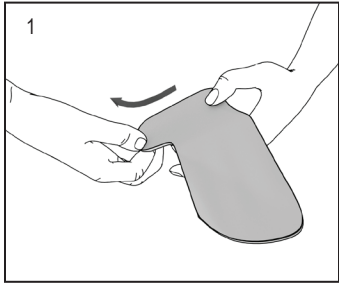


1. Remove straps. Mold proximal tab to create a dorsal hand cuff. (shown for right hand application)

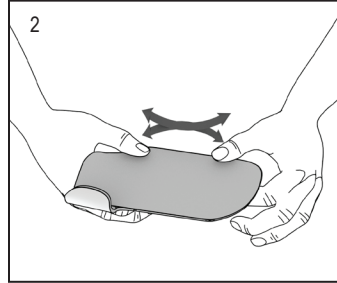


2. Bend moldable finger area to the desired position.

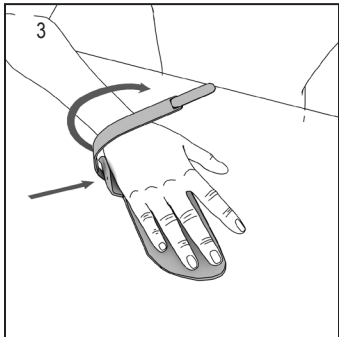


3. Place brace on flat surface. Align hand in brace. Attach long strap at cuff. Pull across wrist and fasten.

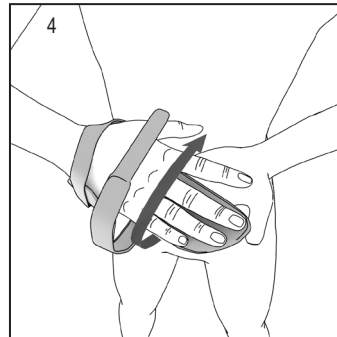

4. Attach one of short straps, pull and fasten across knuckles.

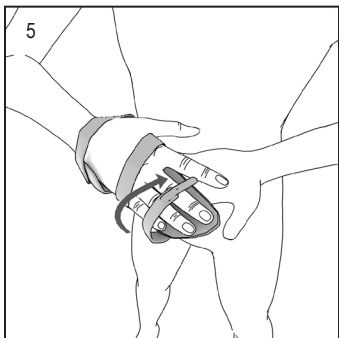

5. Attach other short strap, pull and fasten across fingers.

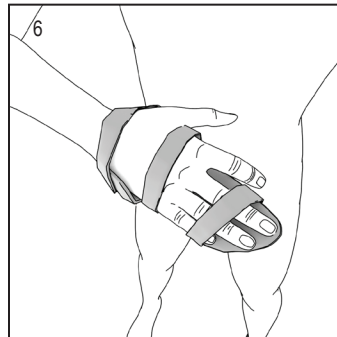

6. Finished application.




Scan for Video


Rev B 9/16

**Warnings and Instructions: Review carefully, proper application is required**


**⚠ Warning:** This device will not prevent or eliminate risk of injury. Do Not Overtighten. If swelling, pain, skin irritation, or an unusual reaction occurs, discontinue use immediately and consult your medical professional.  
Care: Hand wash using mild soap. Rinse thoroughly. Air dry only. Do not tumble dry.

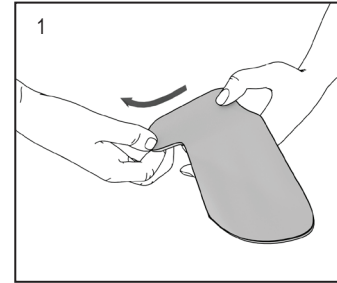


1. Remove straps. Mold proximal tab to create a dorsal hand cuff. (shown for right hand application)

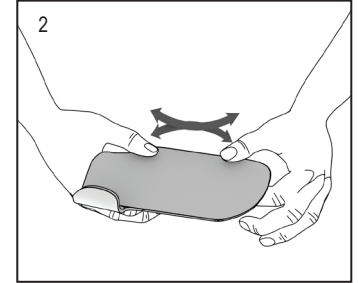


2. Bend moldable finger area to the desired position.

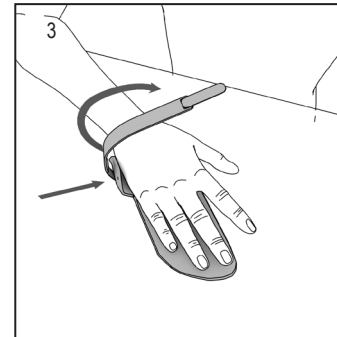


3. Place brace on flat surface. Align hand in brace. Attach long strap at cuff. Pull across wrist and fasten.

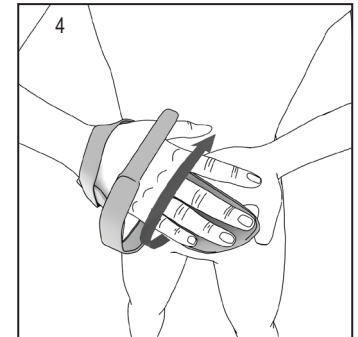

4. Attach one of short straps, pull and fasten across knuckles.

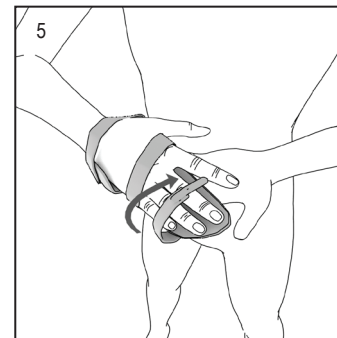

5. Attach other short strap, pull and fasten across fingers.

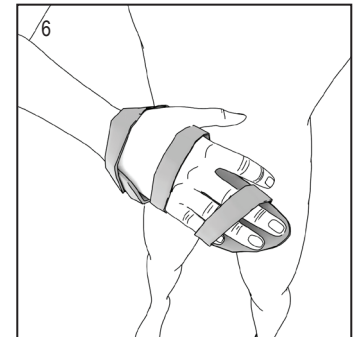

6. Finished application.



Scan for Video

Rev B 9/16