

# Hayes<sup>tm</sup> Padded Elbow


3832

## Warnings and Instructions: Review carefully, proper application is required


**⚠ Warning:** This device will not prevent or eliminate risk of injury. Do Not Overtighten. If swelling, pain, skin irritation, or an unusual reaction occurs, discontinue use immediately and consult your medical professional.

This device should not be worn by persons with known allergies to neoprene.


Care: Hand wash using mild soap. Rinse thoroughly. Air dry only. Do not tumble dry.

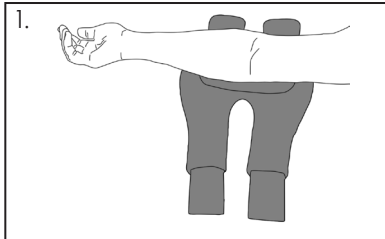

1. Center elbow on brace pad.

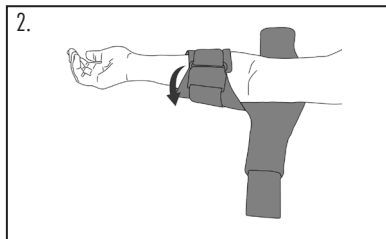


2. Pull front strap completely through loop lock and fasten.

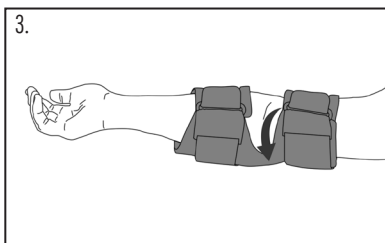


3. Pull rear strap completely through loop lock and fasten.


## CUBITAL TUNNEL APPLICATION

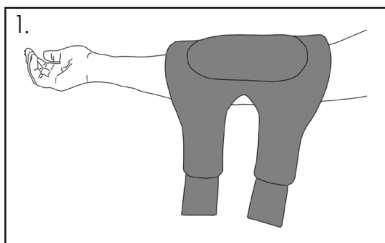

1. Center brace pad on arm.

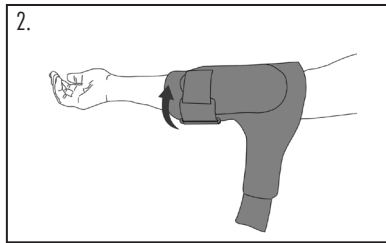

2. Pull front strap completely through loop lock and fasten.

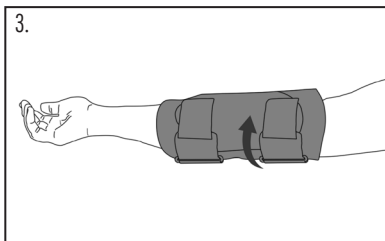

3. Pull rear strap completely through loop lock and fasten.

# Hayes<sup>tm</sup> Padded Elbow


3832

## Warnings and Instructions: Review carefully, proper application is required


**⚠ Warning:** This device will not prevent or eliminate risk of injury. Do Not Overtighten. If swelling, pain, skin irritation, or an unusual reaction occurs, discontinue use immediately and consult your medical professional.

This device should not be worn by persons with known allergies to neoprene.


Care: Hand wash using mild soap. Rinse thoroughly. Air dry only. Do not tumble dry.

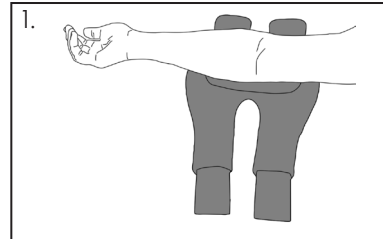

1. Center elbow on brace pad.

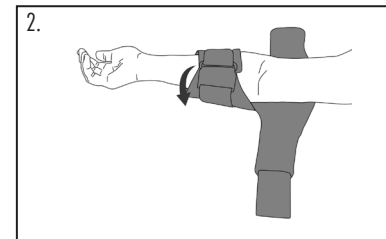


2. Pull front strap completely through loop lock and fasten.

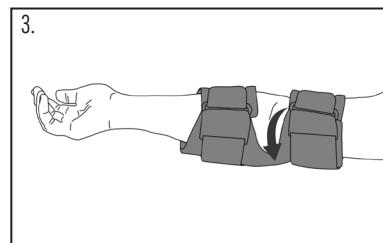


3. Pull rear strap completely through loop lock and fasten.


## CUBITAL TUNNEL APPLICATION

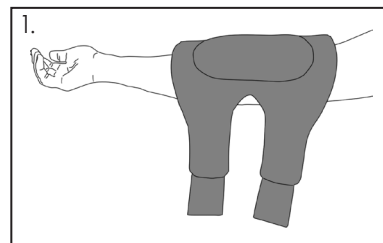

1. Center brace pad on arm.

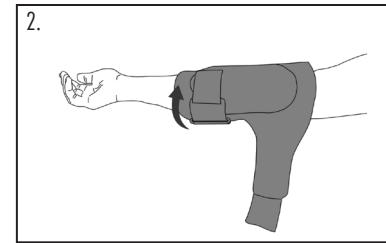

2. Pull front strap completely through loop lock and fasten.

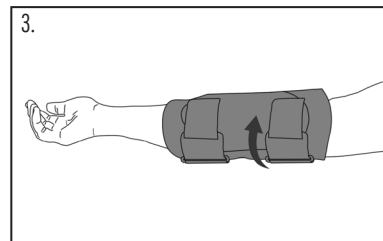

3. Pull rear strap completely through loop lock and fasten.