Cast-Away™ Fracture Orthosis

Warnings and Instructions: Review carefully, proper application is required

⚠**Warning:** This device will not prevent or eliminate risk of injury. Do Not Overtighten. If swelling, pain, skin irritation, or an unusual reaction occurs, discontinue use immediately and consult your medical professional.

Care: Hand wash using mild soap. Rinse thoroughly. Air dry only. Do not tumble dry.

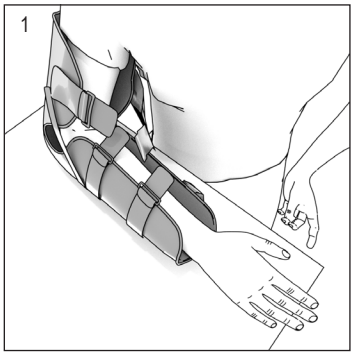

1. Remove cuffs from brace. Place elbow in brace.

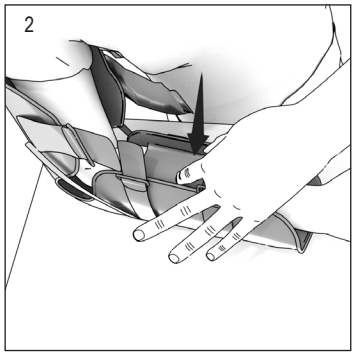

2. Wrap wrist cuff around arm and hold in place.

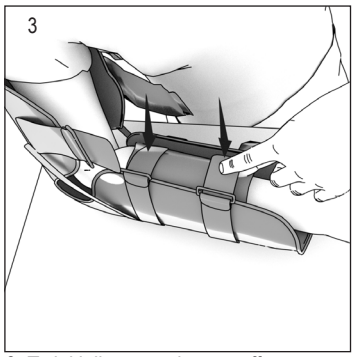

3. To initially set up lower cuff: Attach wrist strap tabs to wrist cuff.

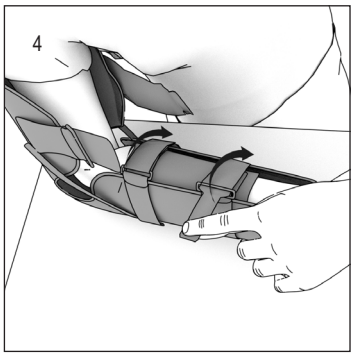

4. Put wrist cuff straps through loop locks. Pull and fasten.

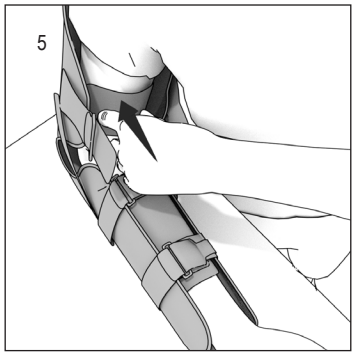

5. Wrap humeral cuff around arm, hold cuff in place.

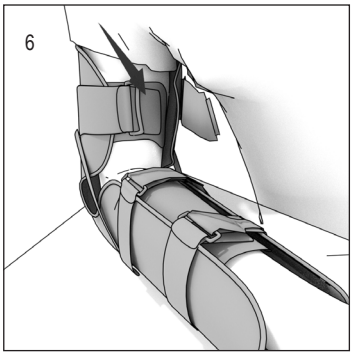

6. To initially set up humeral cuff: Attach humeral tab to humeral cuff.

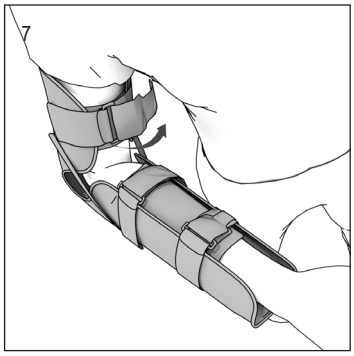

7. Put upper arm strap through loop locks, pull and fasten.

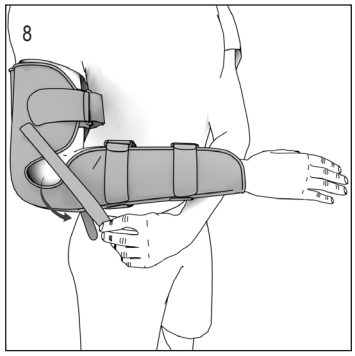

8. Cinch diagonal straps to secure set up position.

Optional Hand Cuff Application:

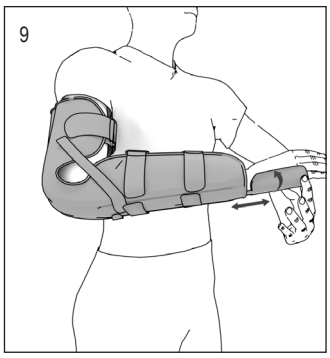

9. Place wrist cuff in slot at end of brace. Adjust to hand

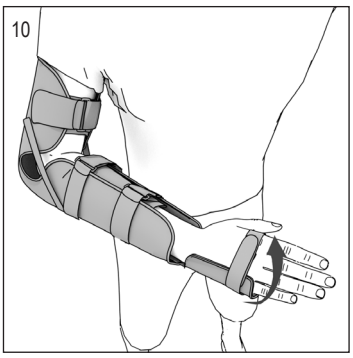

10. Add strap around hand. Pull and fasten.

Optional Shoulder Strap Application:

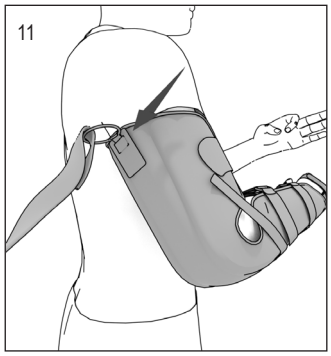

11. Attach shoulder strap at back of upper arm.

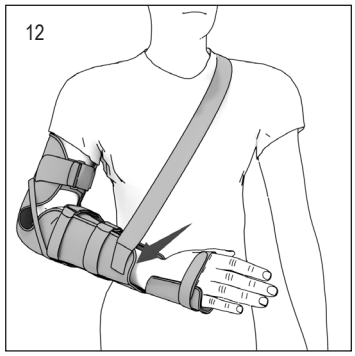

12. Pull shoulder strap over shoulder and attach to brace near the wrist.

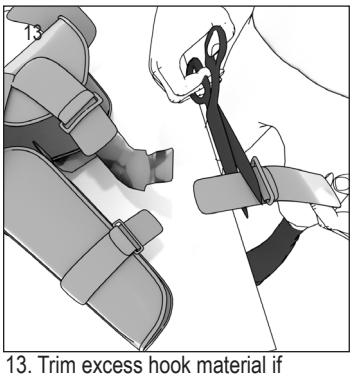

13. Trim excess hook material if cuffs are not used.

FOR FURTHER CUSTOMIZATION:

1 Remove and reverse straps for a left arm application.

2 Bend brace supports and adjust angled straps for a custom angle fit.

3 If adjustment of the humeral cuff is needed to capture the humerus properly, detach the hook and loop rod pockets (and angled lock straps) and reposition them higher or lower on the humeral cuff to obtain desired humeral cuff height.

Scan for video

HELY&WEBER

2018 Hely & Weber